WFS1274AW

PROGRAMME CHART

Whirlpool

A. On/off button

B. Water tap closed indication

C. Clean pump indication

D. Reset/Drain button

E. Programme selector

F. Favorite button

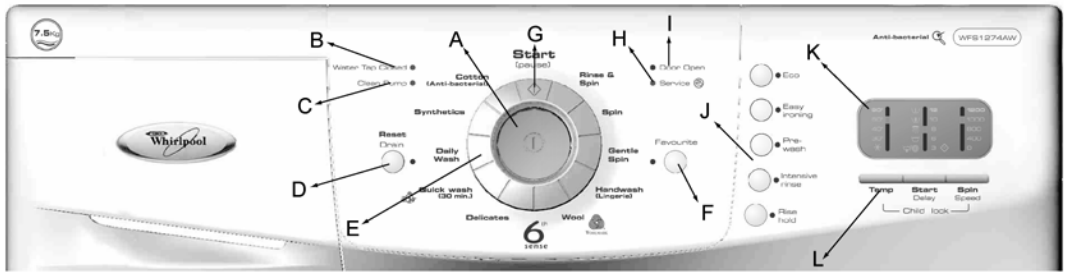

G. Start/pause button

H. Service indication

I. Door open indication

J. Special options buttons

K. Display window

L. Temperature, Start delay , Spin speed buttons

Programme	Care Labels	Type of wash/Notes -for temperature selection, please follow the manufacturer's recommendation on the care label	Max. Load Kg	Detergent and additives Prewash	Main wash	Softener	Favorite	Special options Start delay	Eco wash	Pre wash	Easy ironing	Intensive rinse	Rinse hold	spin speed	Max. Spin speed rpm
Cotton *(cold),30,40,60,95℃	95 60 30 40	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. With heavily soiled laundry the additional "prewash" option can be selected as well. Maximum load for 20℃ and 30℃ programs:5.5kg.	7.5	*	Yes	*	*	*	*	*	*	*	*	*	1200
Synthetics *(cold),30,40℃	30 40	Normally soiled blouses, shirts, overalls etc. made of polyester(Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	*	*	*	*	*	*	*	*	1000(1)
Daily Wash *(cold),30,40,60℃	40 40	Slightly to normally soiled textiles made of cotton and/ or synthetics.	3.0	—	Yes	*	*	*	—	—	—	*	*	*	1200
Quick Wash *(cold),30℃	30 30	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	—	Yes	*	*	*	—	—	—	—	*	*	1200
Delicates *(cold),30℃	30	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	*	*	—	*	—	—	*	*	1000(1)
Wool *(cold),30,40℃		Only woollens with a felt-free finish, labelled with the Woolmark and identified as machine washable. If you select "Rinse Hold" do not leave items to soak for too long.	1.0	—	Yes	*	*	*	—	—	—	—	*	*	1000(1)
HandWash *(cold), 30℃		Textiles made of linen, silk,wool and viscose marked as"handwashable". If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.	1.0	—	Yes	*	*	*	—	—	—	—	*	*	400(2)
Rinse & Spin	—	Same as the last rinse and the final spin in the "Cotton" programme.	7.5	—	—	*	*	*	—	—	—	—	*	*	1200
Spin	—	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	7.5	—	—	—	*	*	—	—	—	—	—	*	1200
Gentle Spin	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	1.0	—	—	—	*	*	—	—	—	—	—	*	1000(1)

*:optional Yes: dosing required —: can not be selected

Whirlpool is a registered trademark of Whirlpool USA

(1) For improved garment care, spin speed is restricted to 1000 rpm in this program.

(2) For improved garment care, spin speed is restricted to 400 rpm in this program.

BASIC CHART

PROGRAMME DATA

Programme	Temperature(℃)	Load(Kg)	Approx. Programme Duration(hours:minutes)*
cotton※※	95	7.5	2:30
Cotton	60	7.5	2:25
cotton※※※	40	7.5	2:14
Cotton	cold,30	5.5	2:10
Synthetics	40	2.5	1:15
Synthetics	cold,30	2.5	1:10
Daily wash	60	3.0	1:05
Daily wash	cold,30,40	3.0	0:45
Quick wash	cold,30	3.0	0:30
Delicates	cold,30	1.5	0:40
Wool	40	1.0	0:46
Wool	cold,30	1.0	0:42
Hand Wash	cold,30	1.0	0:36

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

※ The remaining time indicator can deviate from the values in the table, because it takes into account the house conditions applicable at that time.

※※ To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

※※※ Reference Programme for Energy Label, AS/NZ 2040.1:2005.

ADD DETERGENTS, CLOSE THE DOOR AND ADD SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your instruction for use.

1. Push the **On/off** button,the light below the **Start/Pause** button is bright, the display window shows the status of default program(cotton 40℃).
2. Push the **programme selector** to the desired programme. Then push the **Temperature, Start Delay, Spin Speed** button to change the program if necessary.
3. Push the **Start/Pause** button at least 3 seconds to start the programme.

SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired the respective indiction lights up. When the combination of the programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

" Prewash" button

• Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.

" Intensive rinse" button

• An extra rinse is added and rinse cycle prolonged.

• This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

" **Eco** " button

• With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved, if temperature selected is above 50℃.

"**Easy ironing**" button

• Can be used together with cotton or synthetics programme to make ironing easier.

• Increases the water quantity and the clothes are spun very gently.

" **Rinse hold**" button

•The laundry remains in the last rinse water without processing to the final spin cycle to avoid creasing .

•This option is particularly recommended for the programme "Synthetics", "Everyday wash" and "Hand wash".

•It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Notes: The programme stops to "**Rinse hold**" at the time the "**Rinse hold**" light in the programme sequence indication is on. The indication lamp next sequence the "**Start/Pause**" button flashes.

Terminate the "Rinse hold" option

•Press the "**Start/Pause**" button; the programme will terminate automatically with the final spin cycle for the preset wash programme.

•If you do not wish to spin the clothes, press the "**Reset/Drain**" button and then press the "**Start/Pause**" button.

SYMBOLS IN THE DISPLAY WINDOW

When the programme is running, some symbols light up in the display window.

(From up to down, left to right)

The first column: (temperature indication) 95, 60, 40, 30, *(cold) .

If the washer is in “operation” ,the second column means: prewash, main wash, rinse, hold rinse, spin/drain.

If the washer is in “**Start Delay**” , the second column means 24,12,6,3,1 hours.

The third column: (spin speed indication) 1200, 1000, 800, 400, 0 rpm.

TEMPERATURE, START DELAY AND SPIN SPEED

Temperature, Spin speed adjustment

When you select a programme, the default temperature and spin speed shows in the screen. Press "**Temperature**", "**Spin Speed**" button to adjust if you want.

Start Delay

The "**Start Delay**" allows to run the machine at the consumer's convenience, for example, at night when the electricity might be cheaper.

•Select the programme , temperature and options.

•Press the "**Start Delay**" button to select the delay time by 1, 3, 6, 12, 24 hours.

•Press the "**Start/Pause**" button. The countdown of the delay time begins. It shows in the screen.

•Once having pressed the "**Start/Pause**" button, the remaining time preselected can be adjusted by pressing again the "**Start Delay**" button.

To cancel the "**Start Delay**"

•Before you press the "**Start/Pause**" button

Press other programme selector or press the "**Reset/Drain**" button

•After you press the "**Start/Pause**" button

Press the "**Reset/Drain**" button for at least 3 seconds, the start delay time disappears from the screen.

PROGRAMME START

Open the tap and press the "**Start/Pause**" button, the indication lamp next to the button lights up. Some symbols of programme light up in the display window to show the condition of the machine.

"DOOR OPEN" INDICATION

Before start and after end of a programme, the blue lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked, and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to " Cancel (Reset) a running programme before the end".

RED INDICATIONS

"Water tap closed"

The appliance has no or insufficient water supply, open the water tap; if the indication still light up, refer to the "Troubleshooting Guide" in the instruction for use.

"Clean pump"

Waste water can not be pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instruction for use ("Removing the filter").

"Service"

The appliance stops during the programme. If the service indication lights up and the start delay LED bar appears on the display, please contact After-Sales Service(see "After-Sales Service").

FAVORITE PROGRAMME

When you have done the programme setting and do not press the "**Start/Pause**" button,press the "**Favorite**" button at least 3 seconds to set the programme as your favorite programme. You can set a favorite setting for every main wash programme. But if you want to set another favorite setting for the programme, the former setting will be covered.

PROGRAMME END

All the lights of the programme sequence indicator are off in the display window, and the door open indication lights up.

1.Press the "**On/Off**" button to disconnect the electricity, close the water tap.

2.Open the door and unload the machine.

3.Leave the door open to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the "**Start/Pause**" button to pause the programme. The light around the button flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the "**Start/Pause**" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent if already added on original selection. If you want to adjust the programme when the machine is running, press “**Reset/Drain**” button at least 3 seconds, then choose other programme setting button.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

•Before you select a programme, press the "**Reset/Drain**" button, then press "**Start/Pause**" button to drain if you want.

•When a programme is running, press the "**Reset/Drain**" at least 3 seconds to reset all the settings and drain. Push the programme selector to select other programmes.

Whirlpool is a registered trademark of Whirlpool USA

4619 704 82331

Whirlpool

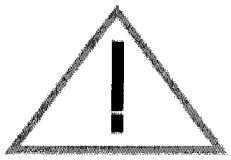

INSTALLATION GUIDE

NOISE, EXCESSIVE VIBRATIONS AND WATER LEAKAGES CAN BE CAUSED BY INCORRECT INSTALLATION.

NEVER MOVE THE APPLIANCE BY CARRYING IT AT THE WORKTOP.

- Read this "INSTALLATION GUIDE" before operating.
- Keep this "INSTALLATION GUIDE" for future reference.
- Read the general recommendations about disposing of packaging in the INSTRUCTION FOR USE.

PARTS SUPPLIED

- Package with small items

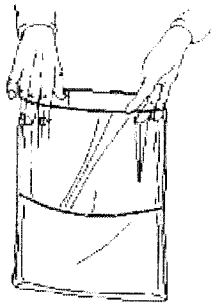

Instruction for use, installation guide, warranty card (depends on model)

A

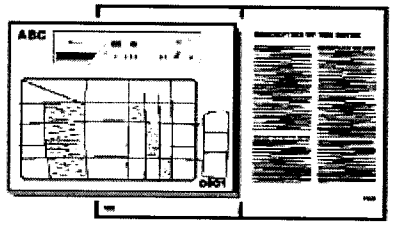

4 plastic caps

B

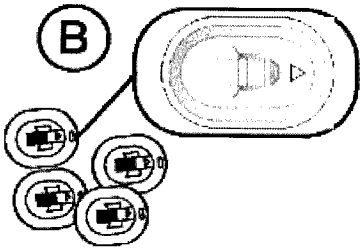

Wrench(depends on model)

C

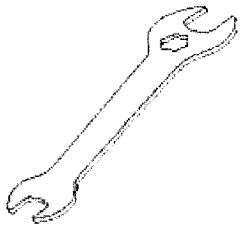

Inlet hose (inside the machine or already installed)

Cold inlet hose

Hot inlet hose (if available, depending on models)

D

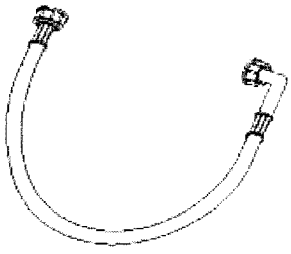

"U"-bend (inside the machine or already installed)

E

BEFORE USING THE WASHER,PLEASE REMOVE TRANSPORT BOITS!

⚠ WARNING

Excessive Weight Hazard
Use two or more people to move and install washer.
Failure to do so can result in back or other injury

Note: To avoid floor damage, set the washer onto cardboard before moving across floor

Important: Not removed transport bolts cause damages to the appliance.

① Unscrew the four screws (see arrows) with the wrench **C** supplied.

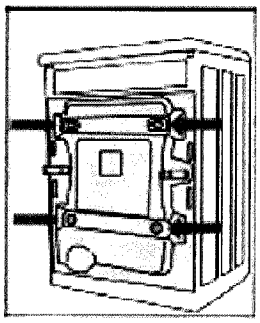

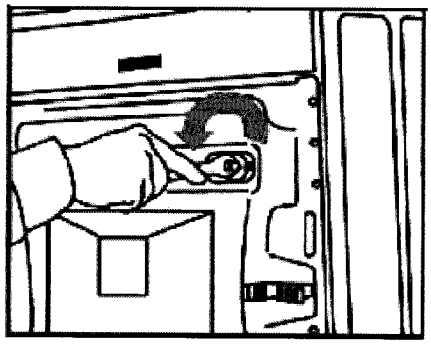

② Move the screws to the centre of the holes.

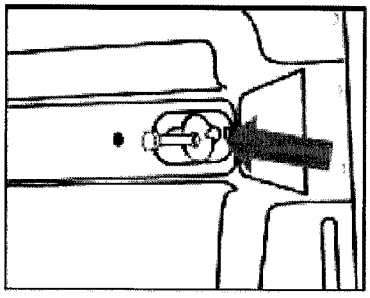

③ Pull out the screws together with the coloured plastic spacer.

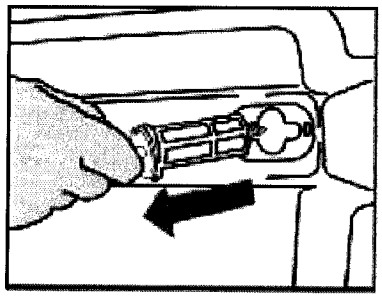

④ To seal the holes insert the supplied plastic caps B in the wide part of the hole and slide them in the direction of the arrow until they click into place.

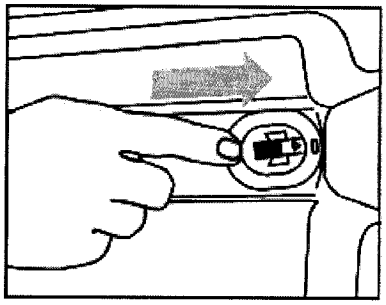

Important: Keep the transport bolts and the wrench for further transporting of the appliance and in this case refit the transport bolts in reverse order.

ADJUSTMENT OF THE FEET

The appliance must be installed on a solid and level floor surface (if necessary use a spirit level). If the appliance is to be installed on a wooden floor, distribute the weight by placing it on a 60x60 cm sheet of plywood at least 3 cm in thickness and secure it to the floor. If the floor is uneven, adjust the 4 leveling feet as required; do not insert pieces of wood etc. under the feet.

⑤ Slacken the locknut clockwise (see arrow) using the wrench **C** supplied.

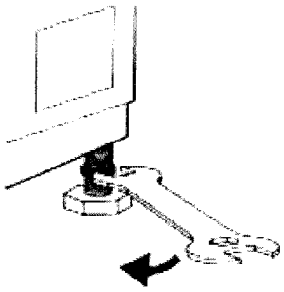

⑥ Lift slightly the machine and adjust the height of the foot revolving it.

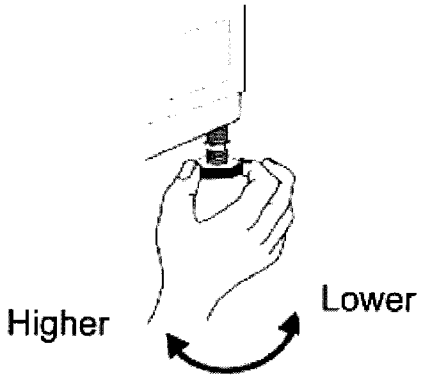

⑦ **Important:** tighten the locknut by turning it anti-clockwise towards the appliance casing.

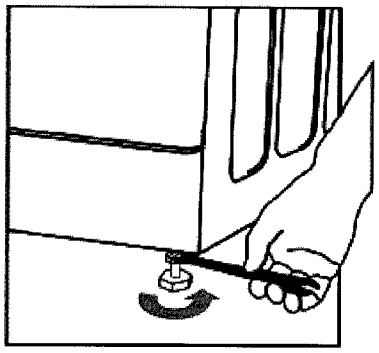

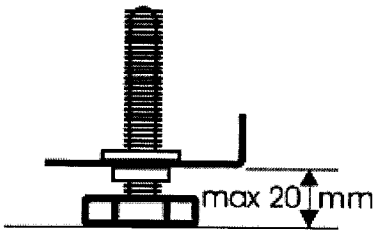

CONNECT THE WATER SUPPLY INLET HOSE

⑧ If the water inlet hose is not already installed ,it must be screwed to the appliance. The blue marked hose is only for cold water . Depending on different models, hot water hose marked with red should also be connected.

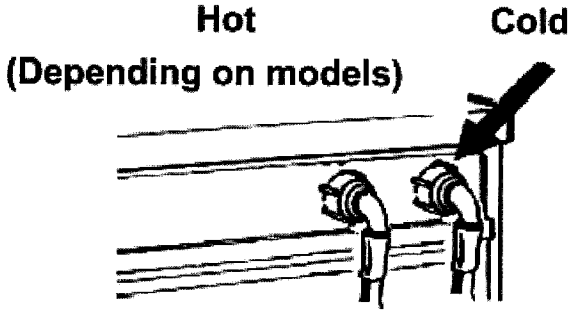

⑨ Screw by hand the inlet hose onto the tap tightening the nut

Attention:

- no kinks in the hose!
- The appliance ***must not*** be connected to the mixing tap of an un-pressurized water heater.
- Check water-tightness of connections by turning the tap completely on.
- If the hose is too short, replace it with a suitable length of pressure resistant hose (1000 kPa min, EN 50084 approved type).
- Check the inlet hose regularly for brittleness and cracks and replace if necessary.
- The washing machine can be connected without a non-return valve.

For models with Water Stop hose:

If the flexible hose is too short, replace it with a 3 m Water Stop hose (available for sale from After-Sales Service or from your dealer). This replacement is only to be carried out by a trained electrician. Depending on the model, the inlet hose and the plastic enclosure at the tap connection contain electrical components. ***Do not cut the hose and do not immerse the plastic enclosure in water.*** Isolate the appliance from the mains immediately if the hose is damaged.

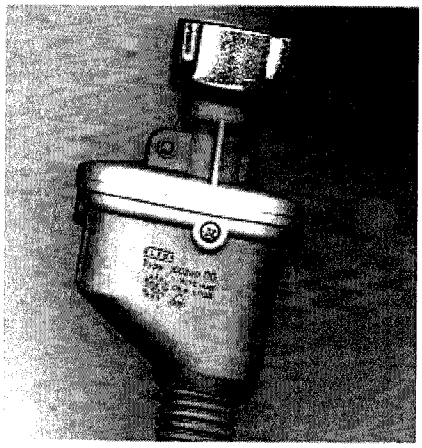

HOT / COLD FILL INSTRUCTION

⑩

If you wish to connect hot and cold water supply (Fig.1):

1. Fix the red marked inlet hose at the hot water tap and at the inlet valve with the red filter on the rear side of machine.
2. Fix the other inlet hose at the cold water tap and at the inlet valve with the blue filter on the rear side of the machine.

Make sure:

a) The connections are tightly fixed

b) Do not invert their position (for example: cold fill into hot inlet valve and viceversa).

If you wish to connect only the cold fill follow the below instruction (Fig.2):

1. You need a Y-piece connector.This can be purchased from local hardware or plumbing supplier.
2. Fix the Y-piece connector to the cold fill tap.
3. Connect the two inlet valves present on the rear part of the machine to the Y-piece connector using the relative provided hoses.

Make sure:

All connections are tightly fixed.

Do not allow children to operate, crawl on, near or inside your washer.
Note that during wash cycles, the surface temperature of the porthole door may increase.
Close supervision of children is necessary when the appliance is used near children.

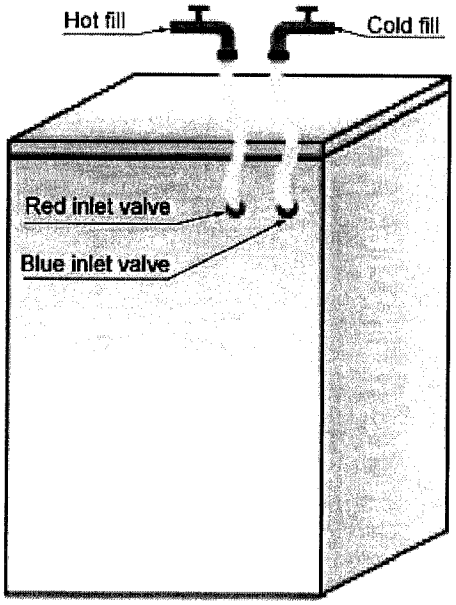

Fig.1

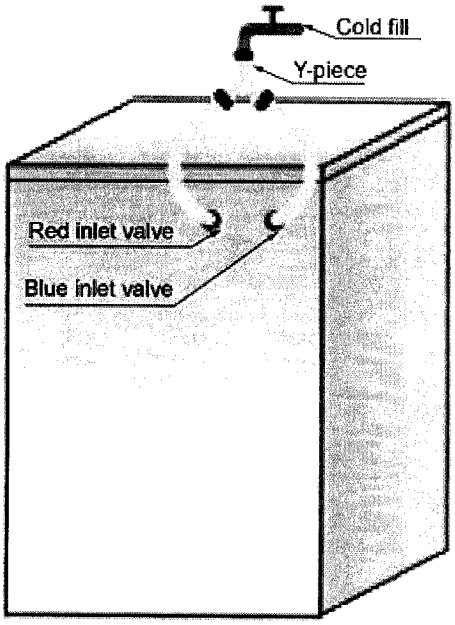

Fig.2

CONNECT THE DRAIN HOSE

(11)

In case the drain hose is installed as shown below:

Unhook it only from the right clip (see arrow)

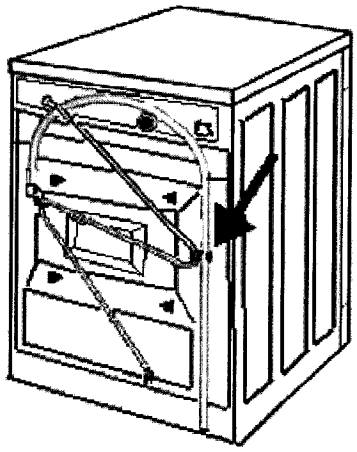

(12) Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend.

Fit the “U” bend E, if not already installed, at the end of the drain hose.

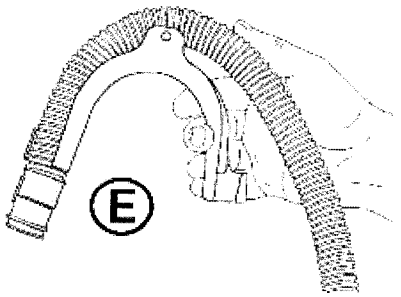

Notes:

- Make sure there are no kinks in the drain hose
- Secure the hose so that it cannot fall down. After wash phase, machine will drain out hot water.
- Small hand basins are not suitable
- To make an extension use a hose of the same type and secure the connections with clips.
- Max. Overall drain hose length: 2.50 m.

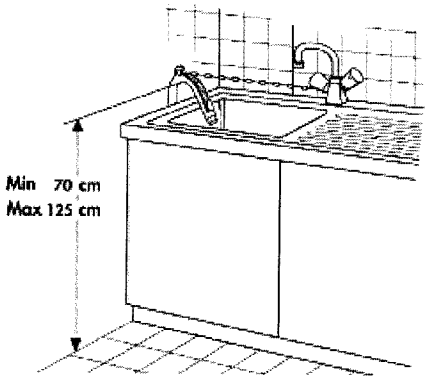

ELECTRICAL REQUIREMENTS

⚠ WARNING

Electrical Shock Hazard

Electrically earth this appliance.
Do not use an extension cord or an electrical portable outlet device.
Failure to follow these instructions can result in death, fire, or electrical shock.

- A 220-240 volt, 50 Hz, AC only, 8-10-amp, fused electrical supply is required. A time-delay fuse or circuit breaker is recommended. It is recommended that a separate circuit serving only this appliance be provided.
- This washer is equipped with a power supply cord having an earthing plug.
- To minimize possible shock hazard, the cord must be plugged into a mating, earthing type outlet, earthed in accordance with local codes and ordinances.

  If a mating outlet is not available,it is the personal responsibility and obligation of the customer to have the properly earthed outlet installed by a qualified electrician.
- If codes permit and a separate earth wire is used. It is recommend that a qualified electrician determine that the earth path is adequate.
- Do not earth to a gas pipe.
- Check with a qualified electrician if you are not sure the washer is properly earthed.
- Do not have a fuse in the neutral or earth circuit.

EARTHING INSTRUCTIONS

For an earthed, cord-connected washer:

This washer must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of electrical shock by providing a path of least resistance for electric current. This washer is equipped with a cord having an equipment-earthing conductor and an earthing plug. The plug must be plugged into an appropriate outlet that is properly installed and earthed in accordance with all local codes and ordinances.

WARNING: Improper connection of the equipment earthing conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly earthed.

Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

For a permanently connected washer:

This washer must be connected to an earthed metal, permanent wiring system, or an equipment earthing conductor must be run with the circuit conductors and connected to the equipment-earthing terminal or lead on the appliance.

⚠WARNING

Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Read all instructions before using the washer.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with petrol, dry cleaning solvents, other flammable or explosive substances as they give off vapours that could ignite or explode.
- Do not add petrol, dry-cleaning solvents, or other flammable, or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using the washing machine, 'turn on all hot water taps and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children.
- The appliance is not intended for use by young children or infirm persons without supervision,
- Before the washer is removed from service or discarded, remove the door or lid.
- Do not reach into the washer if the drum, tub or agitator is moving. Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in this Use and Care Guide or in published user-repair instructions that you understand and have the skills to carry out.
- See Installation Instructions for earthing requirements,
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order' to avoid a hazard.

SAVE THESE INSTRUCTIONS

Whirlpool is a registered trademark of Whirlpool USA
4619 704 82401